


Surface Frame Installation Guide



Included in kit: 2 ends, 2 sides, 4 angle brackets and 16 white screws.

Step #1: Identify the ends.

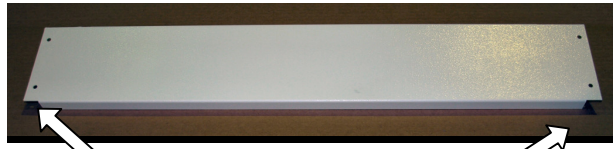

The ends have notches in the painted lip

Step #2: For each end, use 4 white screws and 2 angle brackets, loosely install the angle brackets on the end pieces. Do not tighten, as there may be some alignment to be done. See picture below.



Step #3: Using 4 white screws per side, install the side pieces onto the pre-angled ends. The side piece sits on the outside edge of the angle bracket.

Step #4: Starting at one corner, line up the edges of the frame pieces and tighten all four screws. Repeat for other three corners.



Your frame is now assembled.

Step #5: Mount the assembled frame to the ceiling using the pre-drilled holes on the back of the frame to the ceiling framing using screws (not provided). Make sure to secure all four sides of the frame to properly support the weight of the heater.

