


Getting started with ThermaRay's Comfort Controller is as easy as... 1, 2, 3.

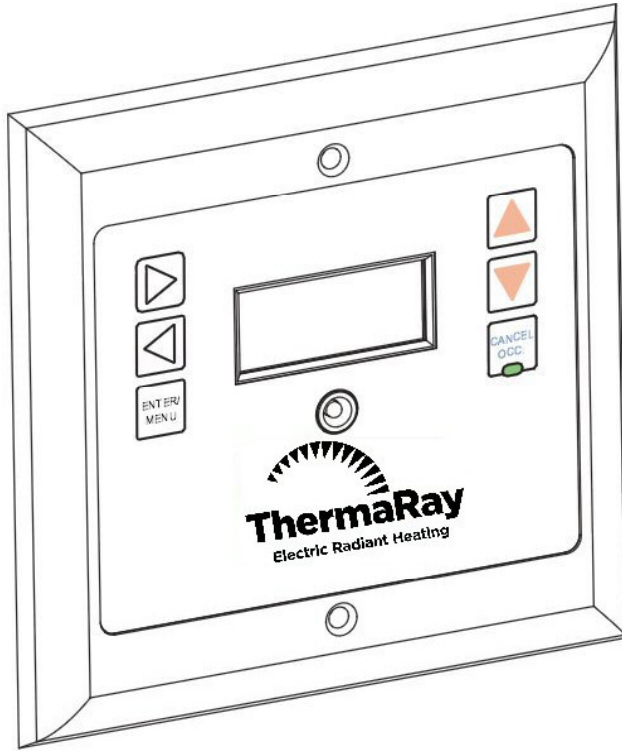

1

Press CANCEL/OCC to put Comfort Control in manual mode.

2

Verify that the green light is on indicating manual mode.

3

Choose the desired room temperature using the Up or Down arrows. Press ENTER/MENU to save the change. You can change this temperature at any time.

Notes:



o Your Low Voltage Comfort Controller must be connected to the ThermaRay Distribution Panel (SRDP2) in order for the heating system to function



o Your Ceiling System is calling for heat when an **UP** arrow is displayed.




o Your Floor or Earth Storage System is calling for heat when a **Down** arrow is displayed.

o Your Floor and Ceiling Systems are calling for heat when both **Up** and **Down** arrows are displayed.

o Your System will turn ON when the temperature difference between the comfort settings and the floor or room temperature is more than 2° Fahrenheit (1°C).



APPLIES TO MODELS SR-LV , SR-LV-B & SR-LV-YOGA

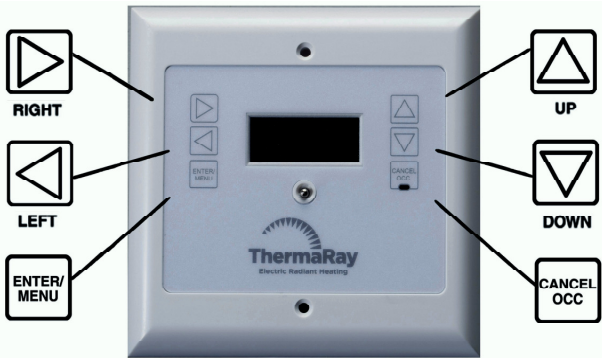


Whether you're a contractor, architect, builder or homeowner, creating the perfect indoor environment has always been a challenge. ThermaRay, the world's #1 name in thermal comfort systems, provides you with the ideal solutions for your comfort. Please take the time to read this operation guide carefully before you begin. A diagram of the menu display system is found at the end of this guide for easy reference.


COMFORT CONTROLLER LOW VOLTAGE (SR-LV, SR-LV-B & SR-LV-YOGA) OWNERS MANUAL

ThermaRay's Comfort Controller displays the current time and date. It also displays the room/floor temperature and the given temperature set point. It is programmable and operational in both English and French. See the Secondary Features section on page 4/8 to set language preference.

SET DATE

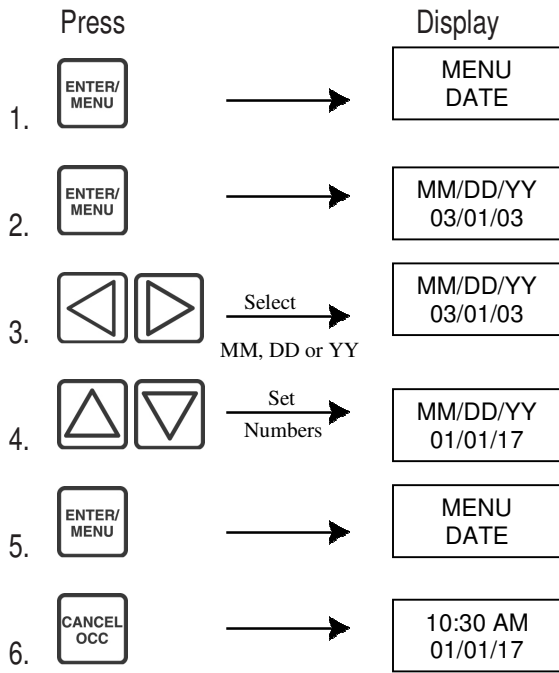

SET TIME

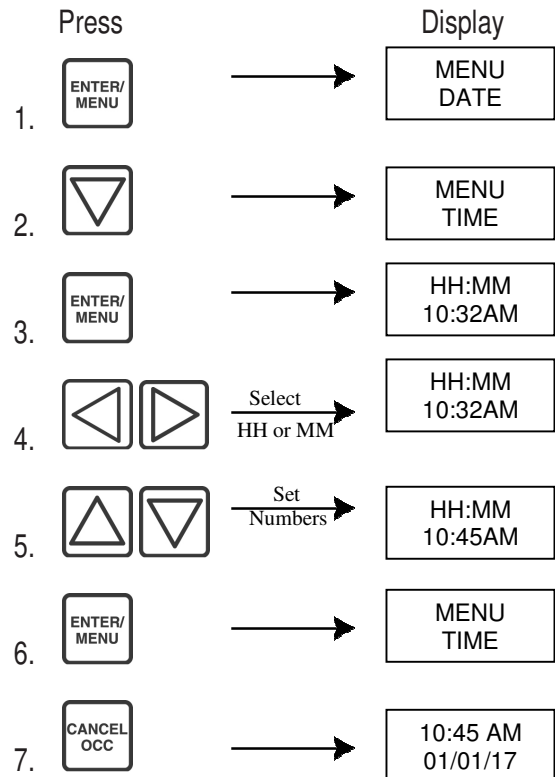

SET MODE


This option needs to be set as it allows you to input which system (s) (Floor, Ceiling or ETS) are being controlled by this particular controller.

BOTH - Ceiling and Floor Systems


ETS + DHW - Earth Thermal Storage and Domestic Hot Water

FLOOR - Floor System only


CEILING - Ceiling System only

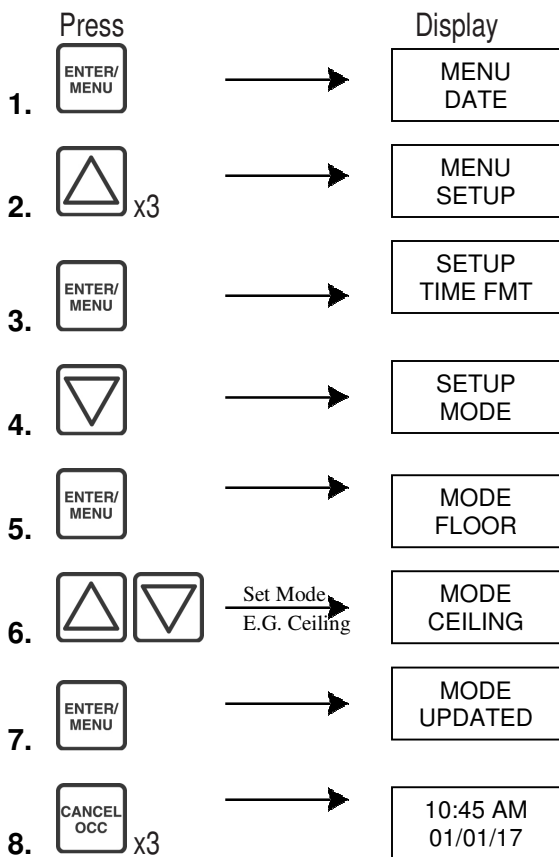

SET TEMP SCALE

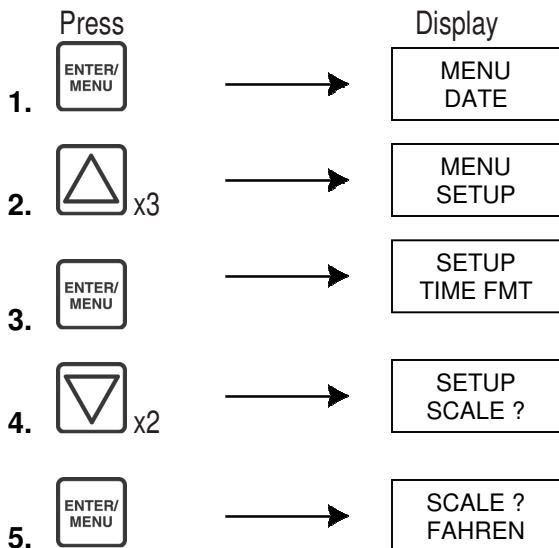


SET TEMP SCALE Continued

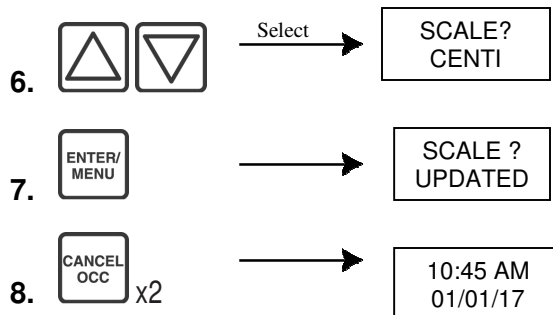


SET DAILY PROGRAMMING

Use this function to program your heating schedule for each day of the week. The controller accepts up to five set points per day with the first starting at 12:00AM and the last ending at 11:59PM. For Earth Storage - if your utility does not have the capability of remotely turning off the power to your ETS system, we suggest that you set your programs to turn off 10 minutes before peak rates come into effect. This should avoid peak rate charges due to clock misalignment.

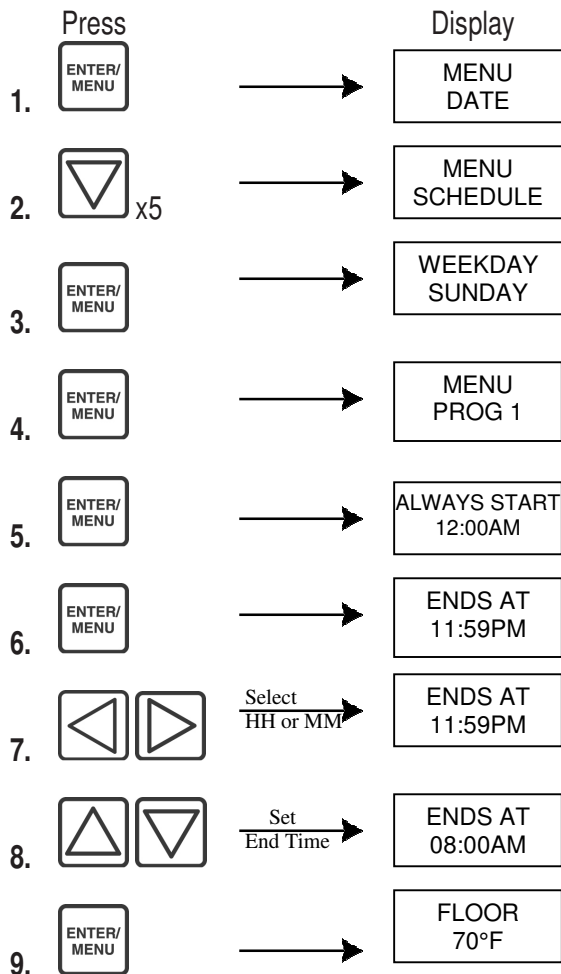


SET DAILY PROGRAMMING *Continued*

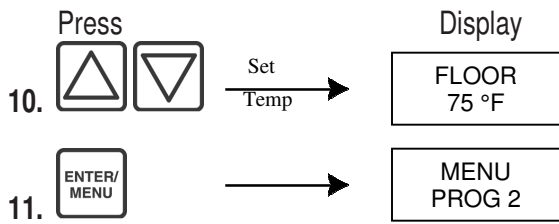

Repeat steps 5-10 until you reach PROG 5 or until your end time reaches 11:59PM.

To copy all the programs from Sunday to the rest of the six remaining days:

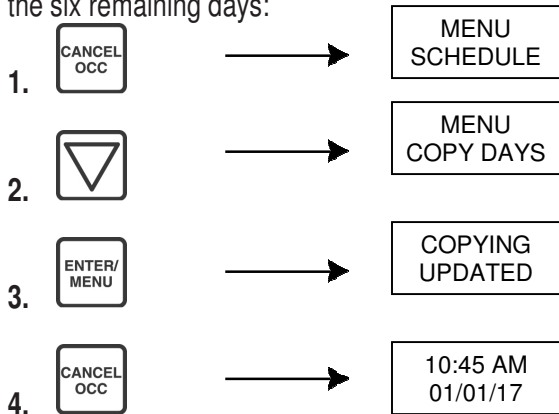

Note: "Copy Days" saves you programming time. If you prefer your weekdays to be programmed differently than the weekend days, program Sunday as if it were Monday. Use "Copy Days" to make all days the same and then return to step 4 and modify Saturday and Sunday.

Ready to Operate

After setting all of your days programs, your ThermaRay Comfort Controller is ready to start operating on its own. If at any time you wish to override your heating schedule, you can easily press the CANCEL/OCC button to activate the Occupied Temperature Override. The light below the CANCEL/OCC button turns on when the override is activated. Pressing the CANCEL/OCC button again will reactivate the regular heating schedule. Should you forget to cancel the override, the ThermaRay Comfort Control will remain in the manual override mode - the program schedule will not be activated. The occupied temperature setting can also easily be changed by pressing the **UP** or **DOWN** arrows when your time, date and temperature are being displayed. Just make sure you press the ENTER/MENU button after you have made a change in temperature or the change may not take effect.


Use this chart to keep track of your preferred program schedules.
Enter the program end-time and desired temperature in each of the given boxes

Day	Prog1 time	Prog1 temp	Prog2 time	Prog2 temp	Prog3 time	Prog3 temp	Prog4 time	Prog4 temp	Prog5 time	Prog5 temp
Sun										
Mon										
Tue										
Wed										
Thu										
Fri										
Sat										


SECONDARY FEATURES

SET OCCUPIED TEMPERATURE


Use this function to set the default room temperature when you choose to override your daily programs. To override the daily programs, press CANCEL/OCC to set the control in manual mode (Green LED on).

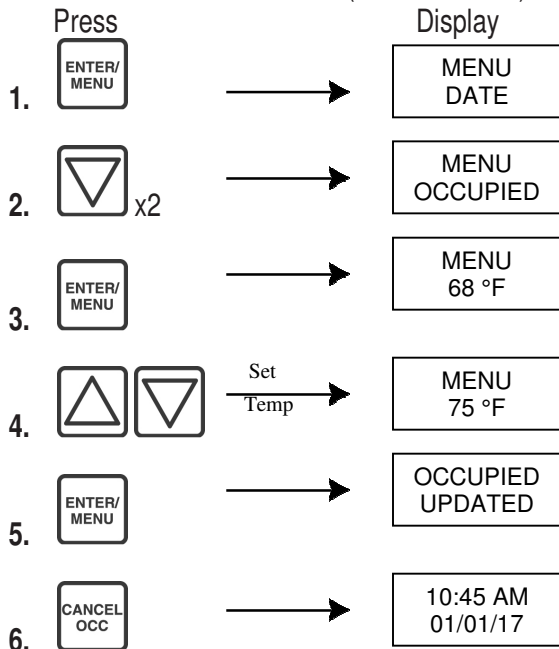

SET LANGUAGE

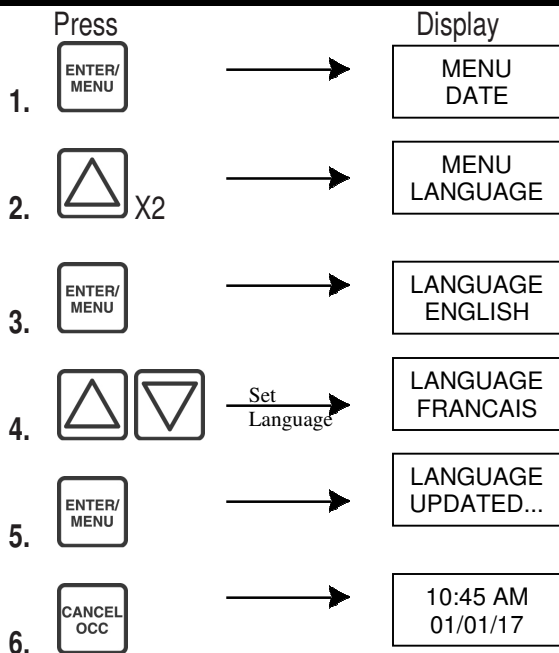


SET TIME FORMAT

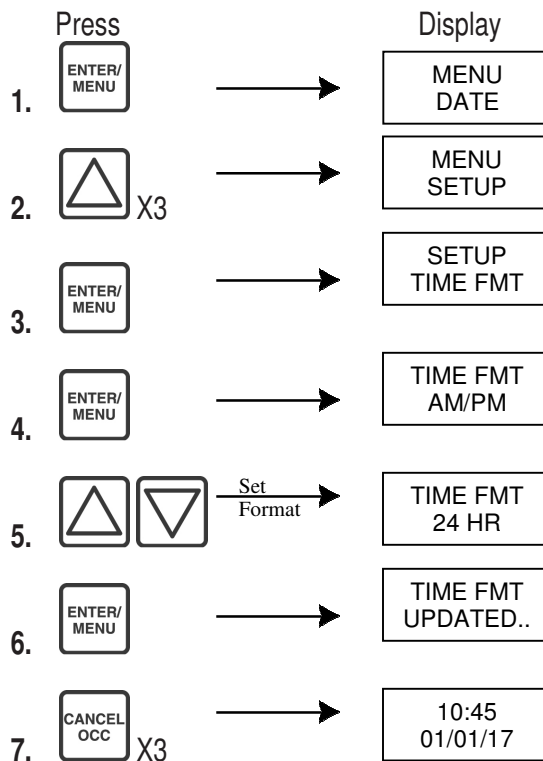


SET VACATION TEMP

Use this function to program the temperature set point used by the vacation function.

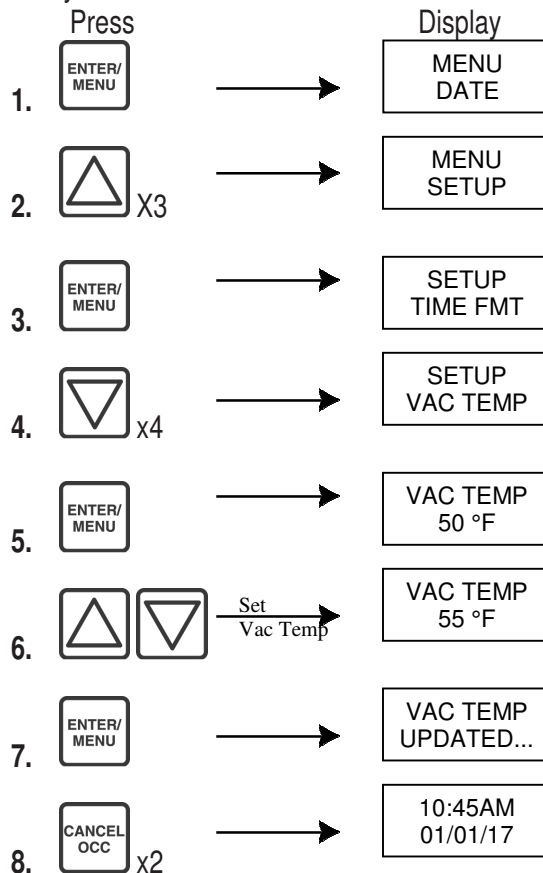


SECONDARY FEATURES CONTINUED


ACTIVATE VACATION TEMP

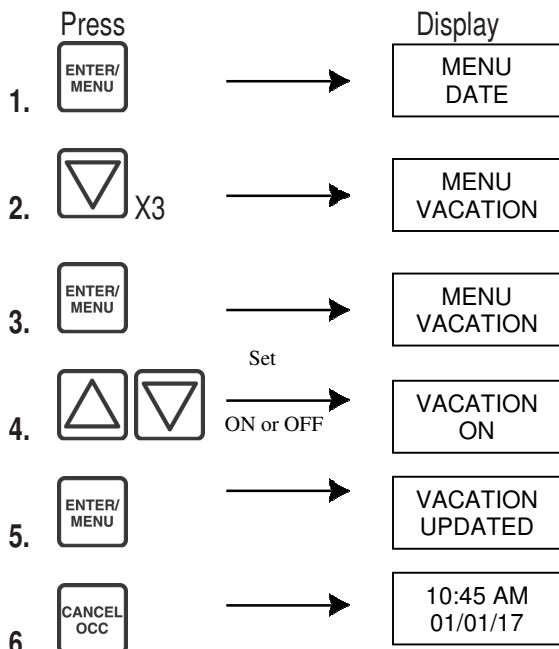


SET ADDRESS

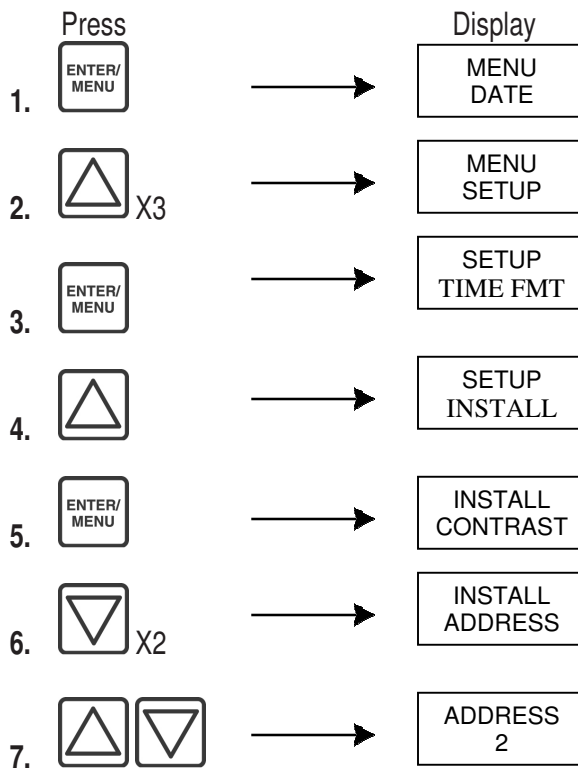


SET GLOBAL OPTION

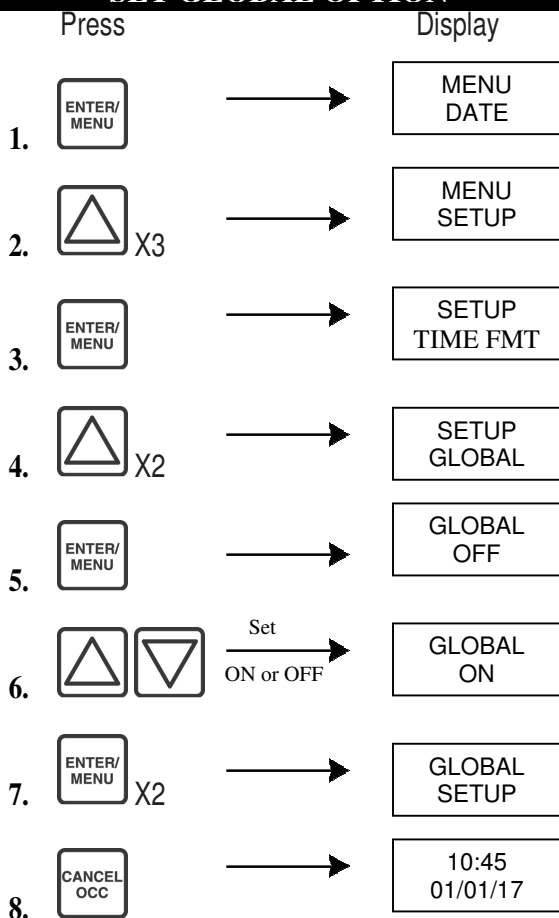

NOTE: Make sure there are no duplicate addresses within the same network of controllers

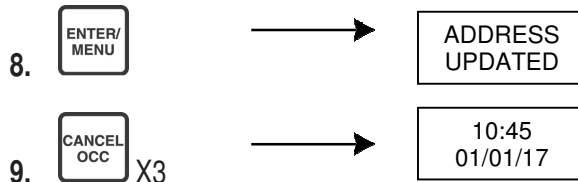

SET NAME

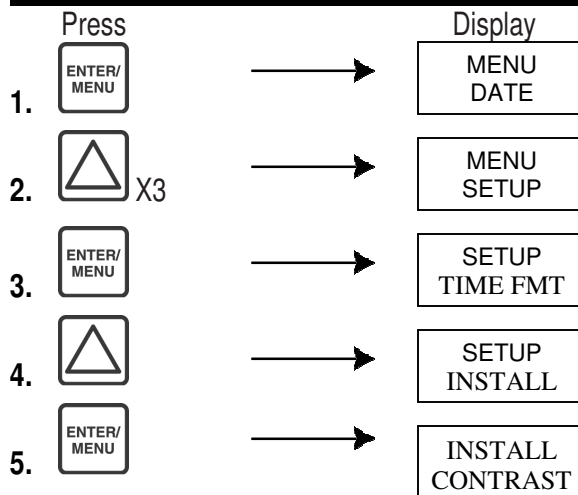

SECONDARY FEATURES CONTINUED

SET NAME Continued

- | | | | |
|----|-------------|---|-------------------------------|
| 6. | Press
x3 | → | Display
INSTALL
MY NAME |
| 7. | | → | Display
MY NAME
KITCH?? |
| 8. | | → | Display
MY NAME
KITCHEN |
- Select Unique Room Name
 Select Letter Between A & Z

Note: Extra "?" symbols will disappear once MENU/ENTER is pressed.

- | | | | |
|-----|----|---|---------------------------------|
| 9. | | → | Display
INSTALL
MY NAME |
| 10. | x2 | → | Display
10:45 AM
01/01/17 |

SET DAYLIGHT SAVINGS TIME

- | | | | |
|----|-----------|---|--------------------------------|
| 1. | Press
 | → | Display
MENU
DATE |
| 2. | x3 | → | Display
MENU
SETUP |
| 3. | | → | Display
SETUP
TIME FMT |
| 4. | | → | Display
SETUP
INSTALL |
| 5. | | → | Display
INSTALL
CONTRAST |
| 6. | x3 | → | Display
INSTALL
DAYLIGHT |
| 7. | | → | Display
DAYLIGHT
ON |
| 8. | | → | Display
DAYLIGHT
OFF |
| 9. | | → | Display
DAYLIGHT
UPDATED |

DAYLIGHT SAVINGS TIME Continued

- | | | | |
|-----|-------------|---|---------------------------------|
| 10. | Press
x3 | → | Display
10:45 AM
01/01/17 |
|-----|-------------|---|---------------------------------|

LOCKOUT OPTION

For Future Release

MULTIPLE SOURCES OPTION

Testing/Viewing Current Temperature Readings from Available Sources - To test/ view the currently read sensors from both the ceiling and floor sensors, go to the MENU screen, select MENU SETUP from the options, press MENU/ENTER and then scroll to INSTALL SENSORS and hit ENTER/MENU again. Use the UP and DOWN arrows to select the sensor you want to read and then press MENU/ENTER. Once you are done, press the CANCEL/OCC button until you have returned to the rotating display screen.

Selecting the Appropriate Sensor - You can set the ThermaRay controller to measure from either the floor sensor or the face (onboard) sensor. The default sensor for modes are:

CEILING MODE - Face sensor

FLOOR MODE - Floor sensor

BOTH MODE - Face sensor for ceiling heat, Floor Sensor for Floor/ETS heat

ETS/DHW MODE - Floor sensor for the slab and High Limit for the heaters to ensure overheating does not occur.

You can change the default sensor for CEILING MODE to use a remote sensor for areas where a thermostat can not be placed close enough to the heat target, or for Under Floor Warming. The SR Sensor must be plugged into the High Limit port on the controller. To have the controller talk to the remote sensor. Press MENU/ENTER and then scroll to MENU SETUP. Press MENU/ENTER again and scroll to SETUP INSTALL. Press MENU/ENTER again and scroll to INSTALL DEF SENS. Hit MENU/ENTER again and then scroll to the LIMIT and hit ENTER/MENU again. Press CANCEL/OCC x4 to return to the scrolling display.

To change the default floor sensor for ETS/DHW repeat the step above and change the sensor to the FACE T.

If your floor sensor fails in any mode, you can simply unplug it from the back of the controller. Your temperature will report as ROOM T and there will be an "*" beside it to indicate the sensor is unplugged.

SECONDARY FEATURES CONTINUED

MULTIPLE SOURCES *Continued*

Connecting to a Remote Controller - If you wish to choose settings on a particular controller connected within the same network from a different controller, you can gain access by doing the following. From the MENU screen, select MENU SETUP and scroll down through to the REMOTE option. You will be prompted to enter the address of the control you want to access. If you have not entered the proper address, you will receive a "No Answer" message. From this point, please try entering the address again, ensuring you are entering the correct one. You may then configure it as you would if you were at that controller.

Ground Fault Circuit Interrupter (GFCI) - If you are using a braided floor cable heat with a low voltage system, the relay in the SRDP2, for the floor cable, must be powered by a GFCI breaker.

Address	Name of Room
1	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	

NAMES CHART.

Example

ADDRESS 1 = Kitchen



ADDRESS 2 = Office

TROUBLESHOOTING

Use the following information to troubleshoot your comfort controller.

Room T "" - Indicates the floor sensor is not working or is unplugged. No need to worry, your ThermaRay controller defaults to the Face Sensor. Your floor warming or ETS system will continue to function normally. You may want to do one of the following:

- A. Remove the controller from the wall by removing the two white screws. Check to see if the floor sensor is properly connected in the floor sensor receptacle.
- B. Leave everything as is.
- C. Replace the floor sensor. You can embed a sensor in a grout line, taking care not to damage the cable. You may have to adjust your set point as the sensor will be in a different location with relation to the floor cable


Garbled Screen - Press  and . If this does not work, remove the controller from the wall by removing the two white screws. Unplug the cat-5 cable and wait one minute. Plug the controller back in and remount to the wall. Garbled screens are due to voltage fluctuations caused by surges or brown outs. If this happens often permanent damage may be done to the controller. To prevent this, you may want to have a surge suppressor installed for the SRDP2 panel to protect all low voltage controls.

No Answer- This is a remote function error. Check that the thermostat is firmly plugged in.

Room T - 50 (°F or °C) - The face sensor is broken and a new controller must be installed.

Heat Continuously On - Check to see if the arrow is on the screen. If it is not, check your cat 5 cable for a short. If it is not, you will need to troubleshoot the SRDP2 panel.

System Diagram

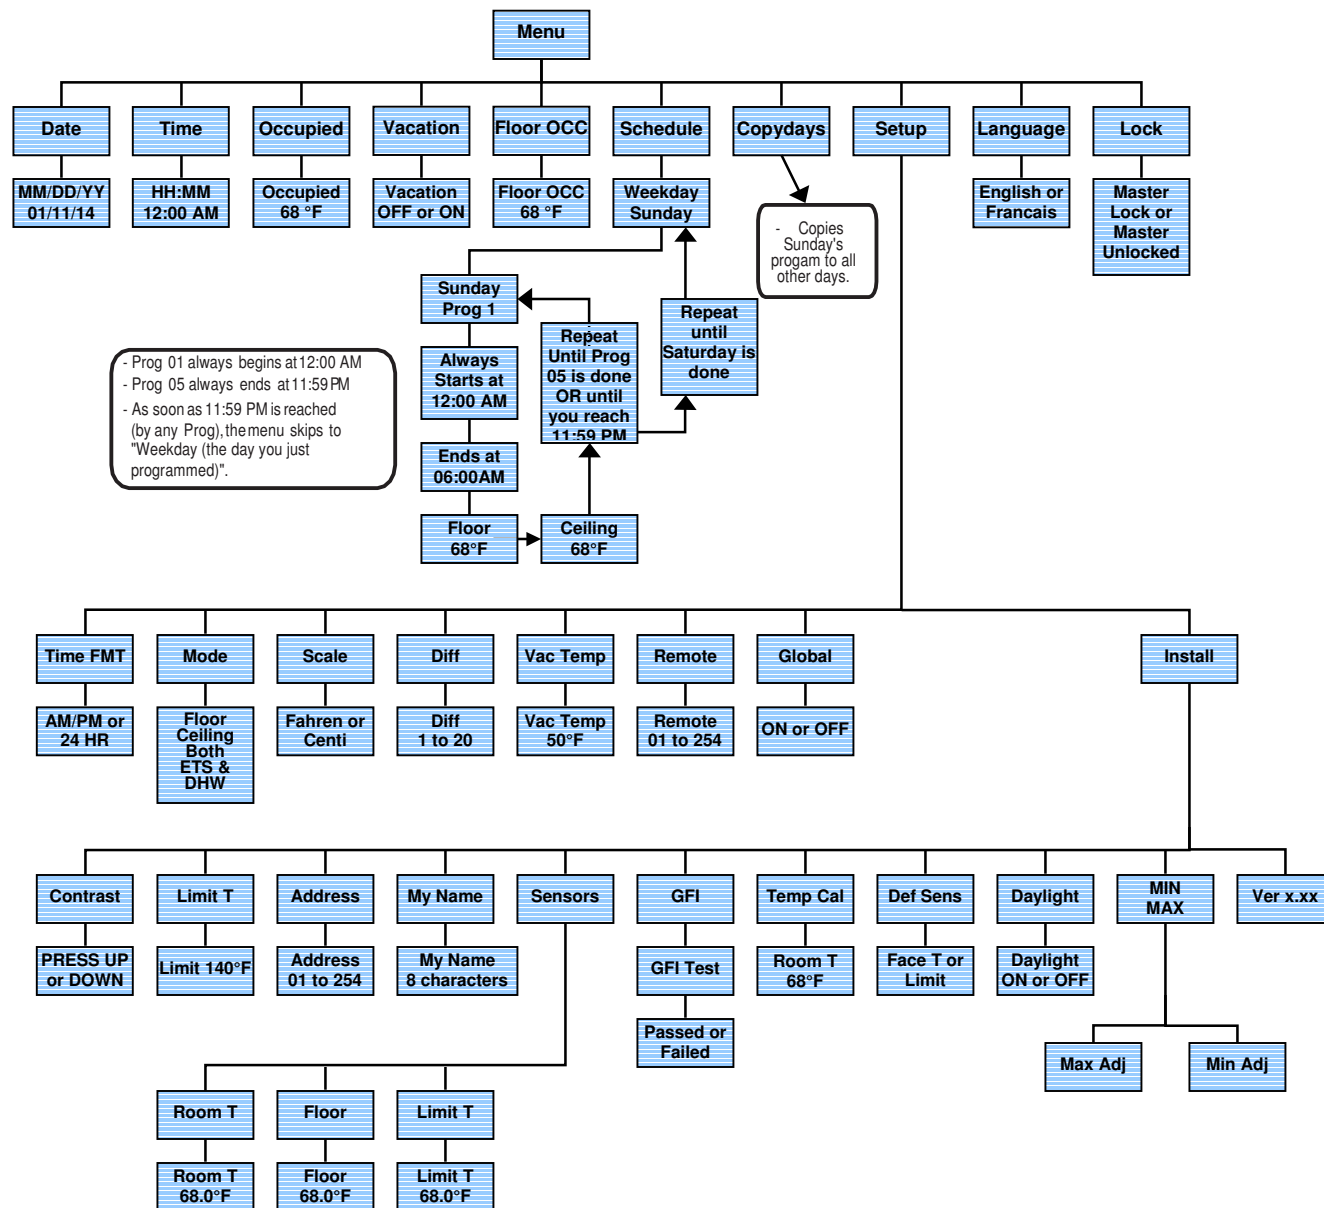

Warranty

ThermaRay Inc., One (1) Year Limited Warranty. ThermaRay Inc. warrants the controller free of defect in material and workmanship after proper installation for a period of one (1) year from the date of installation. During this period, ThermaRay Inc will replace or repair the controller without charge if it has been used under normal conditions. The warranty does not cover delivery costs. The warranty does not apply if poorly installed or damaged after installation. ThermaRay will not compensate for subsequent damage, direct or indirect, resulting from the failure of the controller. All other representation, warranties and conditions, whether oral or written, express or implied, statutory or otherwise are expressly excluded. The defective controller must be returned to the place of purchase or sent prepaid to ThermaRay Inc.

ThermaRay Inc.

670 Wilsey Road, Unit 6, Fredericton, NB, Canada, E3B 7K4
 Tel: 866 - 457- 4600 Fax: 506 - 457- 4699
 E- Mail: sales@thermaray.com
 www.thermaray.com
 Printed in Canada

